

## CHANGING A TCU/VCU FROM FAHRENHEIT TO CELSIUS

Press and hold the AT and the index bottom at the same time.

You will see SECr and a number.

Change the number to 0 and then press the 2 bottoms again to get back to run.

Now make your changes.

Once you are done go back into SECr and return the number to 5 to relock it.